

QUICK START GUIDE

Q380-EW

WI-FI ENABLED MINI SPLIT REMOTE CONTROL

FOR WI-FI TO WORK THIS CONTROLLER MUST
BE PLUGGED IN TO WALL POWER AND LEFT
POINTING AT THE MINI SPLIT




IT MUST BE “PAIRED” WITH THE MINISPLIT AND YOUR WI FI ROUTER FIRST

IF YOU DISCONNECT FROM WALL PLUG,
CONTROLLER WILL STILL CONTROL THE MINI SPLIT
FROM THE BUTTONS BUT NOT FROM YOUR
PHONE. YOU CAN ALSO USE AS A FLASHLIGHT




WHEN PLUGGED IN TO WALL POWER YOU CAN CONTROL VIA “GENIUS REMOTE” APP ON YOUR PHONE AND SET UP SCHEDULES

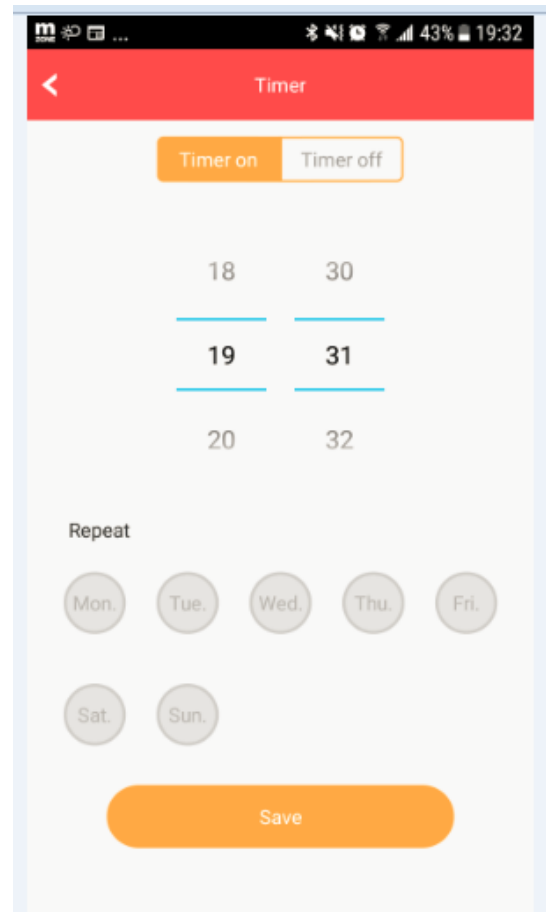

2 WAYS TO POWER: VIA WALL BASE OR WALL MOUNT (DIRECT PLUG)

STEPS TO SET UP WI-FI:


1. DOWNLOAD THE “GENIUS REMOTE” APP
2. REGISTER*
3. THE PASSWORD MUST BE 4-12 CHARACTERS- **NUMBERS OR LETTERS ONLY!!**

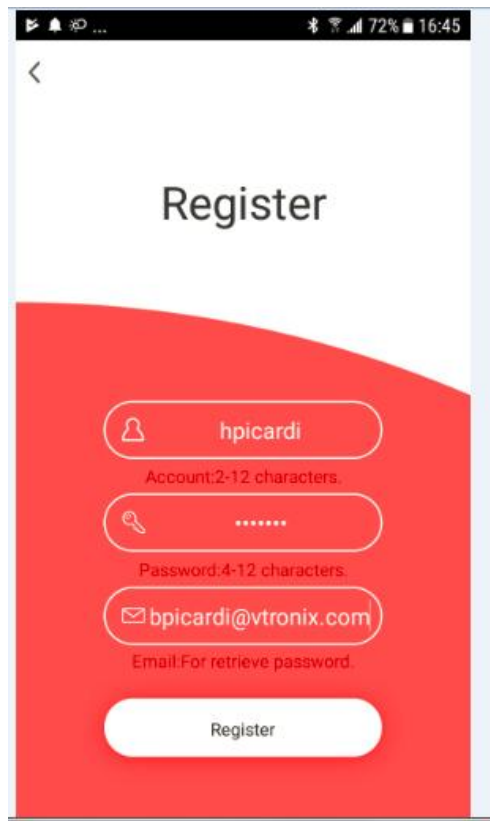

The screenshot shows the 'Register' screen of the Genius Remote app. The screen has a white header with a back arrow and the title 'Register'. Below the header is a red section containing four input fields and a 'Register' button. The first field is for the account name, with the placeholder 'hpicardi' and a note 'Account: 2-12 characters.' The second field is for the password, with a note 'Password: 4-12 characters.' The third field is for the email, with the placeholder 'bpicardi@vtronix.com' and a note 'Email: For retrieve password.' The fourth field is a 'Register' button.

*** YOU MUST ALLOW APP TO
ACCESS YOUR LOCATION!!!!**


AND LOGIN

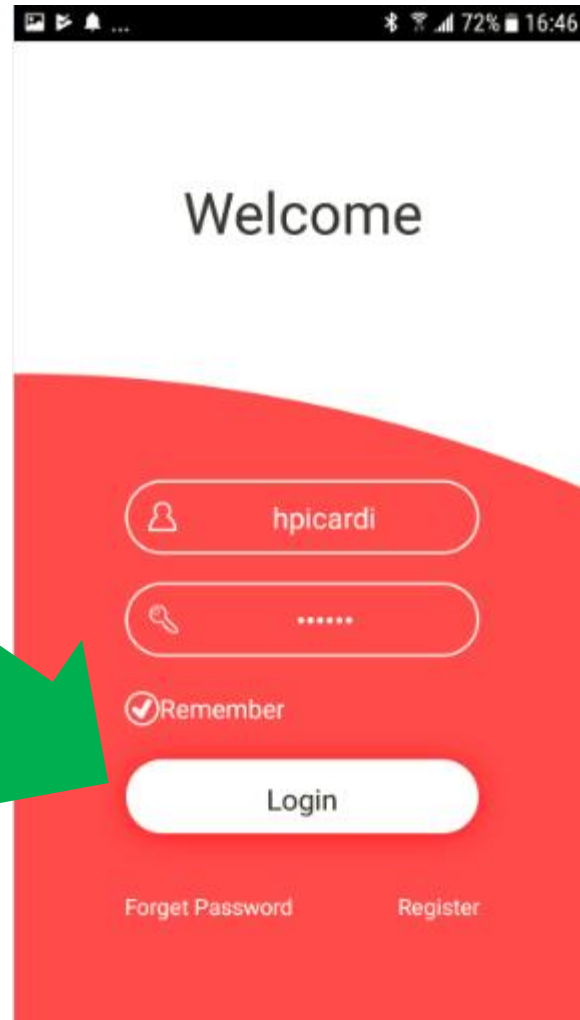

A mobile app login screen with a white background and a red curved bottom section. At the top, the status bar shows icons for camera, gallery, notifications, and battery (72%) at 16:46. The word "Welcome" is centered in a large, dark font. Below it, the red section contains a login form with two rounded input fields: the first has a person icon and the text "hpicardi"; the second has a key icon and six dots. Below these is a "Remember" checkbox with a checkmark. A white "Login" button is centered below the checkbox. At the bottom of the red section, there are two links: "Forget Password" and "Register".


Bert123

PICK ADD DEVICE AND AC REMOTE CONTROLLER

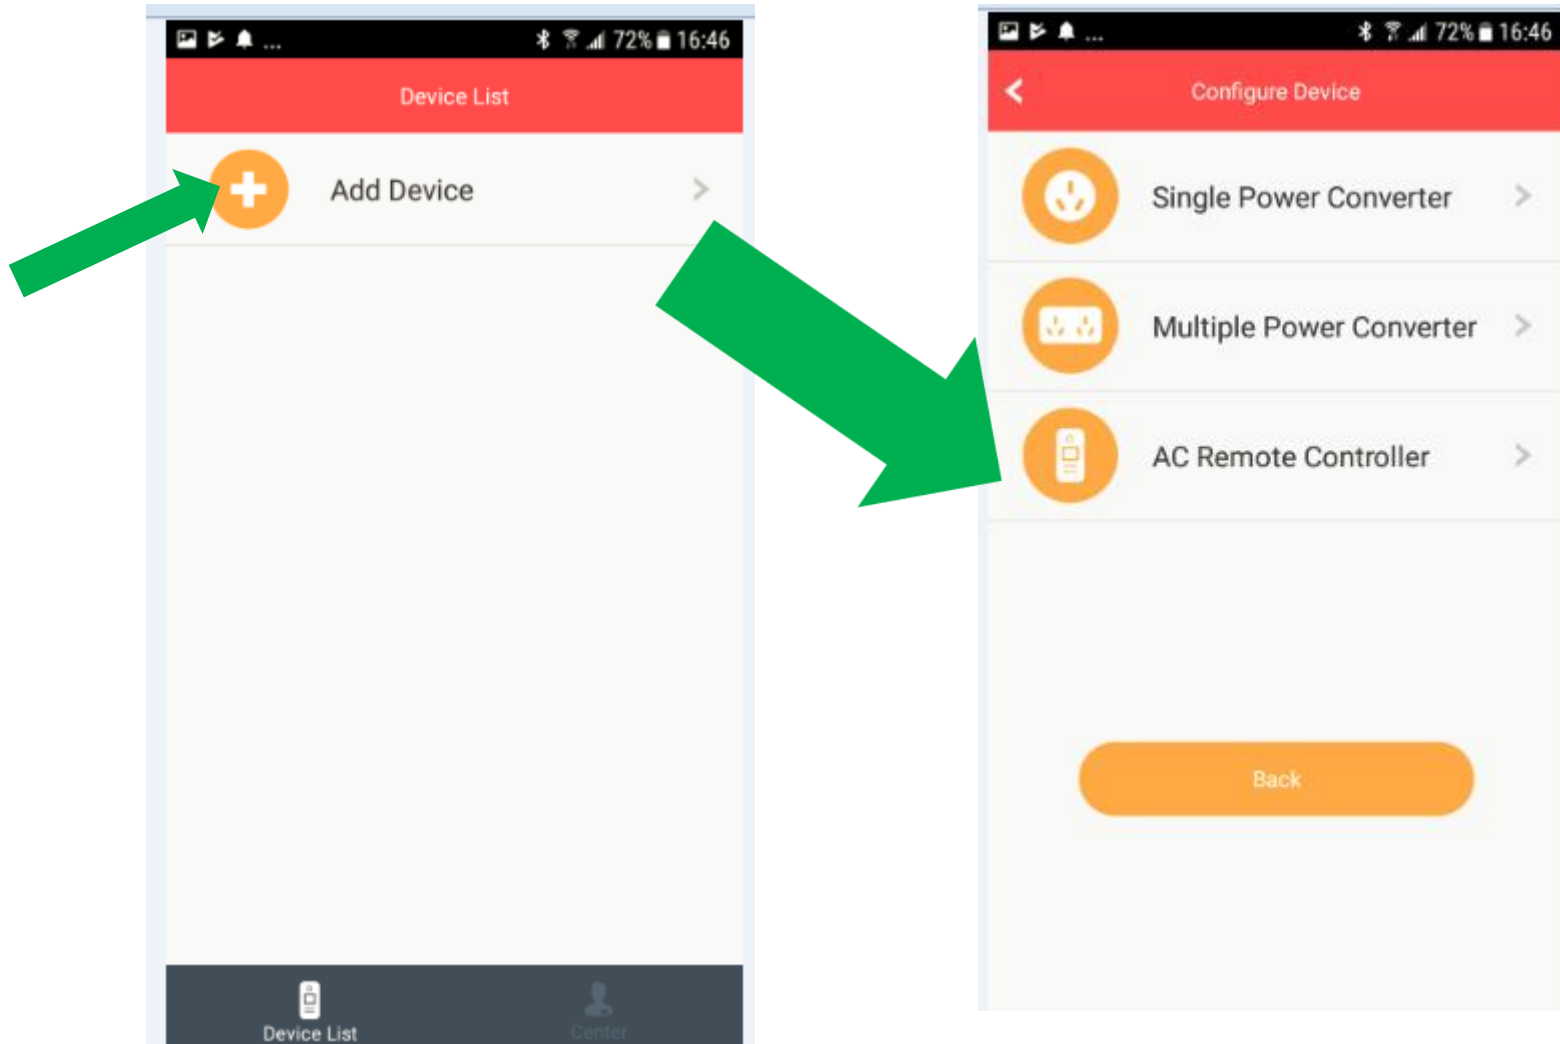

AND FOLLOW THE INSTRUCTIONS ON THE APP (these generally work for Android phones and sometimes for iPhones- IF YOU HAVE AN iPhone and are HAVING PROBLEMS WITH THE APP INSTRUCTIONS, jump to NEXT PAGE FOR A DIFFERENT APPROACH)

ACTUALLY, THE WIFI SYMBOL WILL START FLASHING **RAPIDLY**

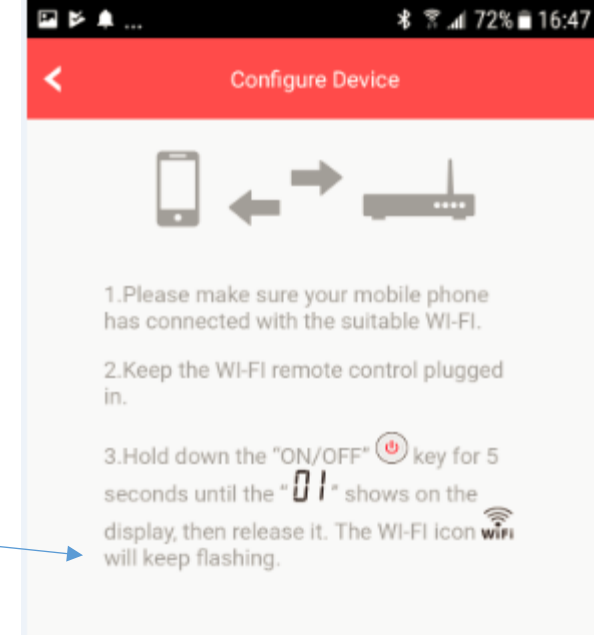

Meaning of Wi Fi Symbol Behavior on Q380-EW

OFF (not present) means: No Wi Fi operation possible.
(The unit is not plugged into an outlet, either with the charger directly plugged into its side, or on the cradle with the cradle plugged in)

Blinking Fast Means: The unit is in pairing mode

Blinking Slow Means: The unit has not been paired with the router, but is ready to do so

Steady Means: The unit is paired with the router



ATTENTION iPHONE USERS!!! USE THIS METHOD TO CONNECT TO THE APP. IGNORE INSTRUCTIONS IN MANUAL AND ON APP!!!

1. Check that the Wi Fi band your phone is connected to, and on which you are trying to add the device, is a 2.4GHz band. It will not operate on 5 Ghz.
2. Check that the remote is plugged to the adapter and into an outlet, either directly or through the cradle. The Wi Fi will not operate if it's not.
3. Once both checks are complete. Please follow the order of the steps below:
 - Open the app on your device and sign on. The First screen should show "Device List". Hit "Add Device"
 - The next screen is titled "Configure Device" and offers 3 choices. Pick "AC Remote Controller".
 - The next screen has the connection instructions outlined in the manual. Ignore these and hit "Next".
 - The next screen is titled "Configure Device". Select your Wi Fi router and enter the password. DO NOT HIT THE "CONFIGURATE" BUTTON AT THIS TIME!
 - WITHOUT CLOSING THE APP, go to WLAN settings on your phone (where you see the Available Networks).
 - Now, go to the remote control and press simultaneously on the LIGHT and SET Buttons, until 02 flashes on the screen.
 - Release the buttons. After a few seconds, a Wi Fi symbol should start flashing on the bottom left of the control's screen. If it doesn't, repeat the previous step until it does.
 - Go back to the phone and, under available networks, find the one called "Chunghop_XXXX" & connect to it.
 - If you get a message telling you that Internet is not available on this hotspot, ignore it. If you are asked whether you want to switch to another network that does have internet, decline, and stay connected to "Chunghop_XXXX".
 - Go back to the app on your phone and now hit the "CONFIGURATE" button. You should get a message of a successful connection and the device should appear on your device list. Initially, the device will briefly appear as Offline, and then after a few seconds as Online.